




How to build your own *ISOM Digiware* system

Insulation monitoring


Build your own system

Control and power supply interface (24 VDC)

or



ISOM Digiware
D-55/D-75



ISOM Digiware
D-55h
Medical

Voltage acquisition module



DIRIS Digiware
U-xx

Insulation fault locating modules

+



ISOM Digiware
F-60

Locating core balance transformers

+




Δ IP with adapter
ISOM T-15

How to build your own *ISOM Digiware* system

Control module for permanent insulation
and location signal injection

+

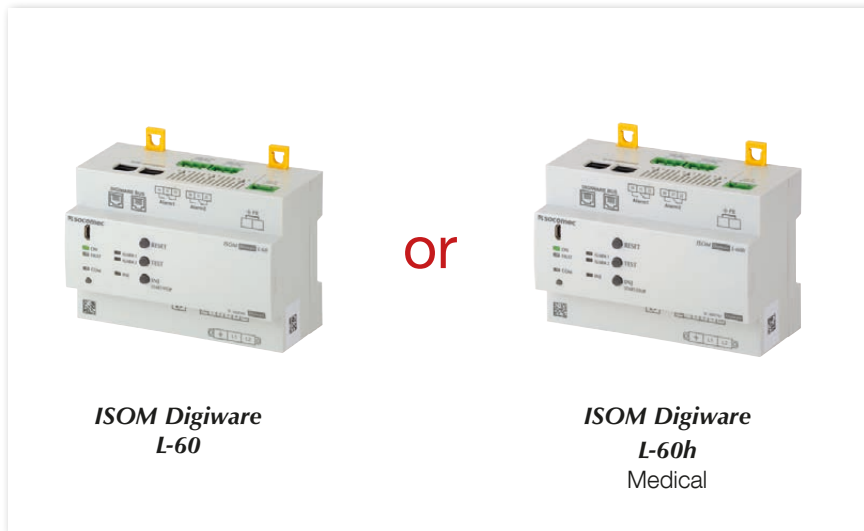

Alert reporting for
medical facilities

+



Find the best Digiware configuration for you



Like a real setup wizard, Meter Selector finds the best Digiware configuration for your projects in just a few clicks!

1. **Find** out everything you need to know for your project.
2. **Download** the circuit diagram and a costed list of hardware.
3. **Find** all your stored projects with the archive system.